



# stratasys®

Objet24/30 Family V3  
3D Printing System



## Copyright

Copyright © 2017-2020 Stratasy. All rights reserved.

No part of this document may be photocopied, reproduced, or translated into any human or computer language in any form, nor stored in a database or retrieval system, without prior permission in writing from Stratasy. This document may be printed for internal use only. All copies, shall contain a full copy of this copyright notice.

[www.stratasy.com](http://www.stratasy.com)

## Trademarks

Stratasy, and Objet24/30 Family V3 are trademarks of Stratasy and/or subsidiaries or affiliates and may be registered in certain jurisdictions. All other product names and trademarks are the property of their respective owners.

## Liability

Stratasy shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material. Stratasy makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. It is the responsibility of the system owner/material buyer to determine that Stratasy material is safe, lawful, and technically suitable for the intended application as well as identify the proper disposal (or recycling) method consistent with local environmental regulations. Except as provided in Stratasy's standard conditions of sale, Stratasy shall not be responsible for any loss resulting from any use of its products described herein.

## Disclaimers

Customer acknowledges the contents of this document and that Stratasy parts, materials, and supplier are subject to its standard terms and conditions, available on <http://www.stratasy.com/legal/terms-and-conditions-of-sale>, which are incorporated herein by reference.

The specifications and/or information on which this document is based are subject to change without notice.

## Feedback

If you have any questions or comments about the way information is presented in this document, or if you have any suggestions for future editions, please send a message to [c-support@stratasy.com](mailto:c-support@stratasy.com).

# Contents

---

<b>Introduction</b> .....	<b>5</b>
About this Guide .....	5
Installation and Training Schedule .....	5
<b>Physical Description</b> .....	<b>6</b>
Size and Weight .....	6
<b>Shipment and Delivery</b> .....	<b>7</b>
Shipping Information and Customer Responsibility .....	7
Shipping Pallet .....	7
Lifting Equipment .....	7
Unloading .....	7
<b>Installation Area</b> .....	<b>9</b>
Floor Plan (Printer Area) .....	10
<b>Workstation Requirements</b> .....	<b>11</b>
<b>Electrical Requirements</b> .....	<b>12</b>
Power .....	12
Grounding .....	12
Circuit Breaker .....	13
Residual Current Device (RCD) .....	13
Power Connection .....	13
UPS (Uninterrupted Power Supply) .....	13
<b>Communication Lines</b> .....	<b>15</b>
Local Area Network .....	15
Telephone .....	15
<b>Environmental Conditions</b> .....	<b>16</b>
Temperature and Humidity .....	16
Air Quality .....	16
Noise Level .....	16
<b>Accessories and Utilities</b> .....	<b>17</b>
Start-Up Kit .....	17
Fire Safety Equipment .....	17
<b>Materials Handling and Storage</b> .....	<b>18</b>
Printing Materials .....	18
Cleaning Solvent .....	18



# Introduction

## About this Guide

The information and requirements provided in this document ensure proper installation and operation of the Objet24/30 Family V3 printing system. The customer is responsible for preparing the site as described in this document, and according to any applicable local regulations.

If you have any questions about the information in this document, contact your Stratasys representative.

All site requirements must be met before the installation date. The Site Preparation Checklist should be submitted to your Stratasys representative. Shipping will be arranged after the checklist is received by Stratasys.

Non-compliance with requirements specified in this document may result in additional installation charges.

## Installation and Training Schedule

Installation and training take between one and two work days and include:

- Basic installation and adjustment
- Operator training including practice under supervision

# Physical Description

The Objet24/30 Family V3 printing systems consist of the following main components:

- printer
- material cabinet
- printer computer (built into the printer)
- printer-server workstation (provided by the customer)

Figure 1 Objet24/30 Family V3 printer



## Size and Weight

The following table shows the size and weight of the printer.

Table 1 Size and weight

W × H × D (cm)	W × H × D (inch)	Weight (kg/lb)
82.6 × 60 × 62	32.5 × 23.6 × 24.4	106 kg / 234 lb



- W = Width; H = Height; D= Depth
- The weight of the printer does not include printing materials.

# Shipment and Delivery

## Shipping Information and Customer Responsibility

Shipment to the customer will be arranged by Stratasys as indicated in the “ship to” part of the invoice. The customer is responsible for providing detailed delivery information, including, whether or not there is loading dock at the delivery site.

The customer is responsible for transporting the printer to a suitable installation site. Upon request, your Stratasys service provider will advise regarding these matters.



**Note:**

Only Stratasys-certified Customer Support Engineers are authorized to unpack and install equipment supplied.

## Shipping Pallet

The following table shows the approximate size and weight of the printing system mounted on a pallet.

Table 2 Size and weight of printer on shipping pallet

W × H × D (cm)	W × H × D (inch)	Weight (kg/lb)
114 × 86 × 77.5	44.9 × 33.9 × 30.5	141 kg / 311 lb



W = Width; H = Height; D = Depth

## Lifting Equipment


- lifting capacity: 150 kg (330 lb)
- extension: 100 cm (40 in.)

## Unloading

The unloading area should be a level surface.

The installation location must be accessible from the unloading area. The customer is responsible for unloading the printer from the truck and transferring it to the installation location.

Figure 2 Printer center of gravity

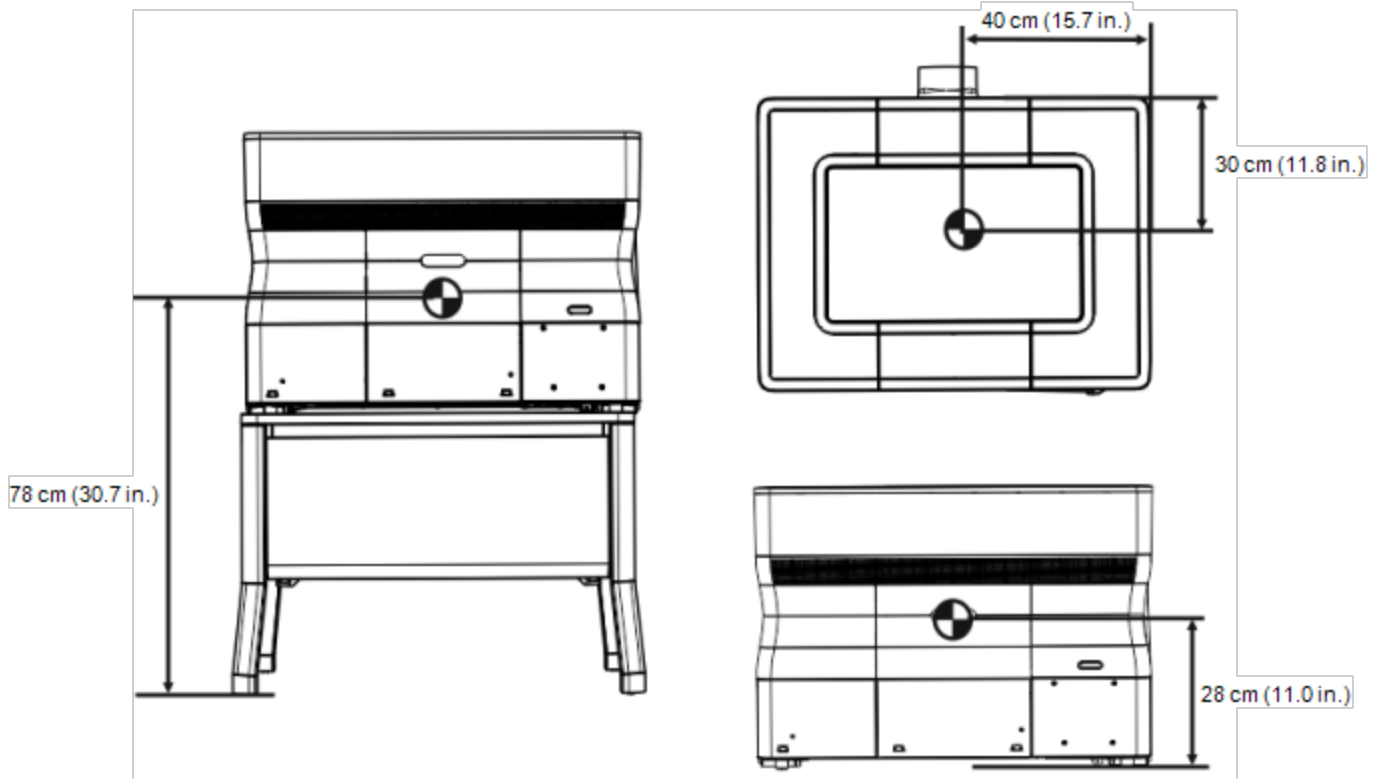



# Installation Area

The installation area should be free of sources of vibration and electromagnetic interference that could affect the proper functioning of the printer.

The printer should be positioned on a stable surface, such as a stand with lockable wheels.

A suitable stand can be ordered from Stratasys.

The floor gradient should be less than 0.5% (5 mm per meter).

The maximum table load is 150 kg (330 lb).

The required table height is 62-72 cm (24.8-28.8 in.).

The server workstation and the printer should be located in the same room.

The cable between the server workstation and the printer should not exceed 5 meters (16 feet). The communication cable provided should not be extended or replaced with a longer cable.

Clearance around and above the printer should ensure convenient access and servicing.


The area around the printer should remain dry at all times. Do not place the cleaning station within 5 meters (16 feet) of the printer.

Shelves and cabinets are recommended near the printer for convenient storage of tools, parts, accessories, manuals, and materials.

## Floor Plan (Printer Area)

The following is a sample floor plan, showing the 3D printing system—the printer and the workstation. The dimensions shown in the figure are the minimum clearance requirements.

Figure 3 Printer floor plan (sample, not to scale)

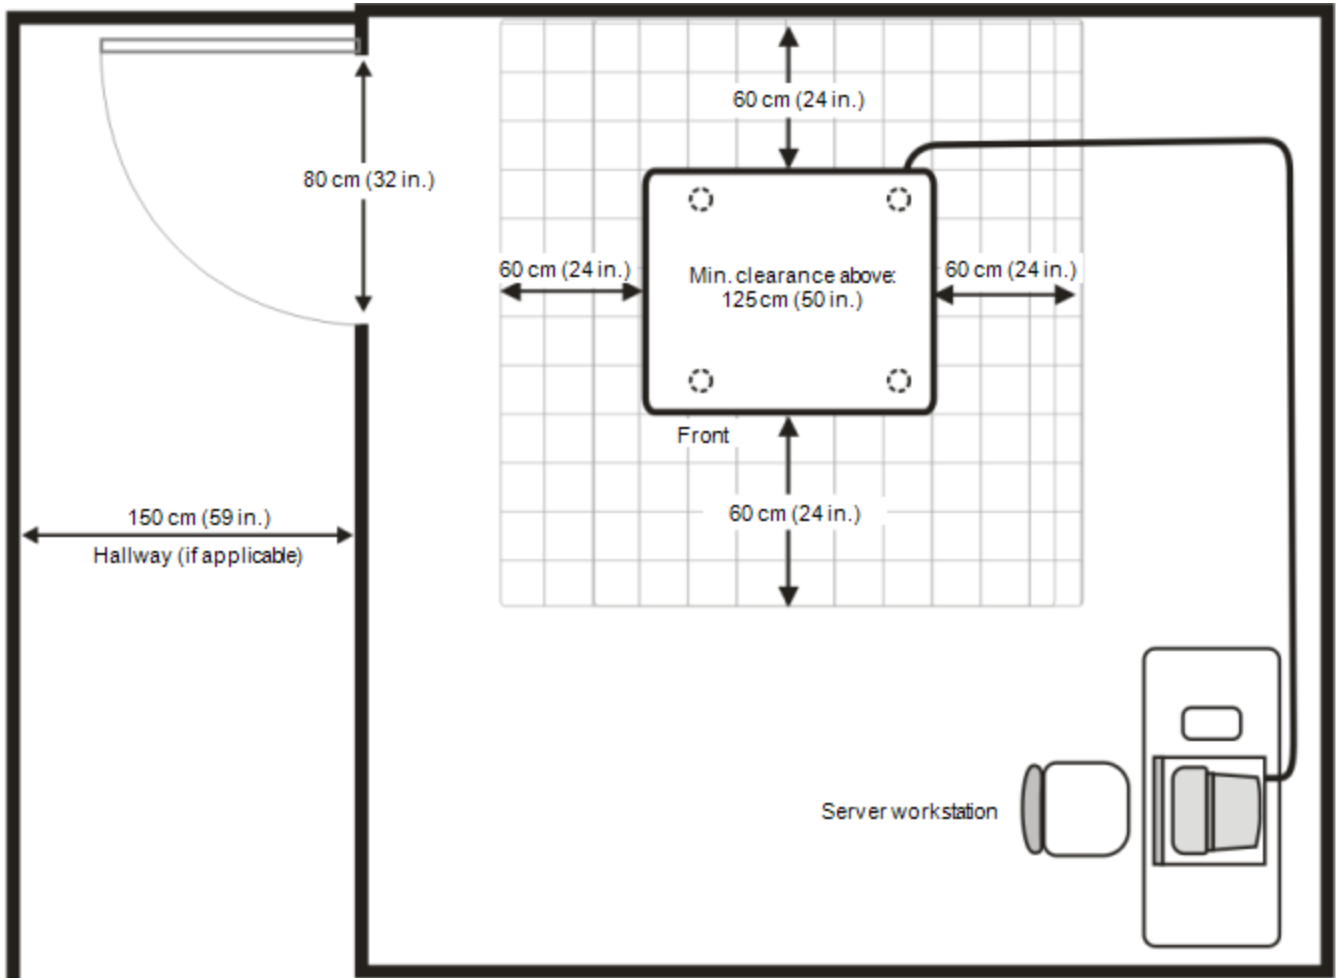

# Workstation Requirements

The customer is responsible for supplying a computer with the following specifications for the server workstation.

	Requirement
Computer Type	Standard desktop PC <sup>1</sup>
Processor	Intel® Core™ i5 or higher
Operating System	Windows® 10 64-bit <sup>2</sup> (professional edition only)
RAM	8 GB or more <sup>2</sup>
Optical Drive	CD/DVD ROM
HDD/SSD	80 GB or more (minimum free space on disk: 40 GB)
Network Card	LAN TCP/IP (2 network cards for server workstation; 1 network card per client workstation)
Mouse/Keyboard Connection	USB
Monitor Cable	One cable with VGA connector
Anti-virus	Recommended: TrendMicro, Eset NOD32, AVG, Kaspersky <sup>3</sup>

Administrator privileges are required on the server workstation. These specifications are also recommended for any additional client workstations running Objet Studio. Specifications for client workstations running GrabCAD Print (instead of Objet Studio) are listed here: <http://help.grabcad.com/print/system-requirements>.

<sup>1</sup> For systems using a KVM switch box to control both the built-in printer computer and the server workstation with same keyboard-monitor-mouse set: All-in-one computer.

<sup>2</sup> A 64-bit operating system is recommended, to utilize 8 GB of memory.

PolyJet Studio running on a 32-bit application can utilize only 4 GB of memory.

<sup>3</sup> Most anti-virus programs can be used. Programs by vendors listed were tested in Stratasys labs.

# Electrical Requirements

The customer is responsible for ensuring that all tasks described in this section are performed by authorized personnel.

## Power

A stable, reliable source of power is required. Power to the UPS (or printer) should be supplied directly from the main electrical panel. Other electrical outlets should not be connected to the line.

Printer power rating:

- 100–120 VAC, 50–60 Hz, 7 A , 1 phase
- 200–240 VAC, 50–60 Hz, 3.5 A , 1 phase

For information about actual power consumption, contact your Stratasys representative.


If the power at the facility does not support the above specifications, contact your Stratasys specialist.



### Important:

The diagram below shows the required connection to the power socket. Make sure that the electrician sees this before installing the printer.

Figure 4 Connection diagram

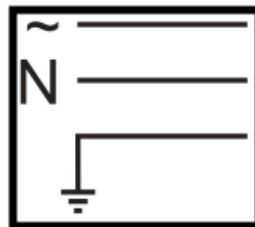

## Grounding

The printer is grounded through a single-phase, AC plug. Make sure that the AC outlet is properly grounded, in accordance with local electrical codes.

## Circuit Breaker

A circuit breaker (Type-C) with the following specification is required (subject to the local electrical code).

Table 3 Circuit breaker

Voltage	Circuit Breaker
100–120 VAC	10 A
220-240 VAC	6 A

## Residual Current Device (RCD)

The wall outlet must be connected to a residual current device (RCD).

## Power Connection

The printer is shipped without a power cable, which is supplied during installation.

The following electrical outlets are required:

- one outlet behind the printer
- three outlets close to the printer (for the workstation, monitor, and servicing equipment)

## UPS (Uninterrupted Power Supply)

It is mandatory that the printer is powered through a UPS unit, provided by the customer. This ensures that—

- the quality of printing is not affected by power fluctuations from the mains.

The UPS specifications are listed below.

Table 4 UPS requirements

Voltage <sup>1</sup>	Current	Power	Power Factor <sup>2</sup>	Bridging Time	Interface	Topology
100–120 VAC	22 Amps	1800 W	0.9	15 minutes	USB port <sup>3</sup>	Double conversion online
220–240 VAC	10 Amps	2700 W			Compatible with Windows® 10 and Windows® 7	

The following UPS systems meet the above requirements:

- Eaton 9SX3000G–220–240 VAC
- Eaton 9SX2000–100–120 VAC

<sup>1</sup>Single-phase; 50/60 Hz

<sup>2</sup>Defined as the input-to-output ratio of the UPS.

<sup>3</sup>UPS units that only connect to a serial communication port are not suitable.


<sup>4</sup>Command-line control is necessary for the UPS software to execute a script in the printer software when shutting down.

# Communication Lines

## Local Area Network

A LAN communication cable is required if server/client workstations are connected to a local network, as shown in the following diagram.

Figure 5 Network installation

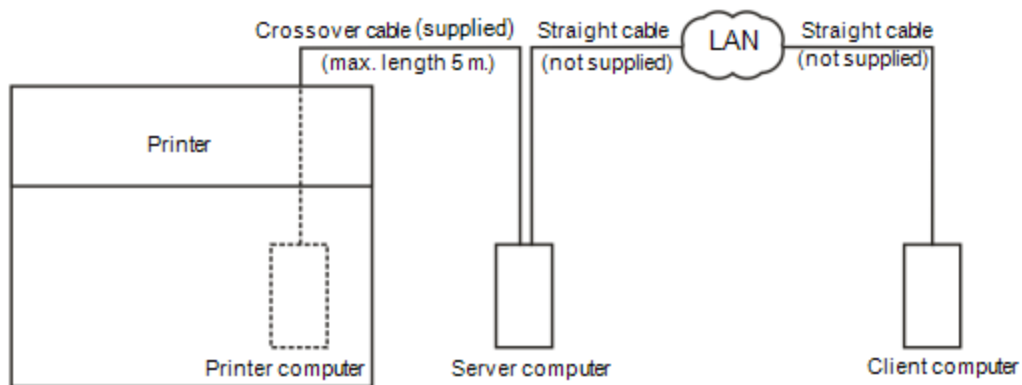

The connection to the local network should be established *prior to* printer installation.

## Telephone

A telephone near the printer is recommended for general communication and service calls.

# Environmental Conditions

## Temperature and Humidity

The temperature and relative humidity around the printer must be maintained within certain limits. Peak conditions occur when the printer and the server workstation draw maximum electrical power, resulting in the heat dissipation listed in the table below.

Table 5 Heat dissipation (peak conditions)

	Heat Dissipation
Printer	760 W (2600 BTU/hr)
Server workstation	450 W (1530 BTU/hr)
Total	1210 W (4130 BTU/hr)

The room temperature and relative humidity should not exceed the limits listed in the table below.

Table 6 Room temperature and relative humidity specifications

	Range
Temperature	18°C to 25°C (64.5°F to 77°F)
Relative humidity	30%–70% non-condensing

## Air Quality

The room ventilation system should change the air at least four times every hour.

## Noise Level

The noise level at a distance of 100 cm (39.4 in) from all sides around the printer is less than 70 dB during printing. The printer does not generate impact noise.



# Accessories and Utilities

## Start-Up Kit

The printer is supplied with a start-up kit, which includes tools and accessories. These tools and accessories should be available during printer installation and operation.

## Fire Safety Equipment

A gas-based fire extinguisher is recommended in case of fire in or near the system. Some other fire extinguishers are also acceptable, but liquid fire extinguishers should not be used. Contact local fire authorities for specific recommendations.

# Materials Handling and Storage

## Printing Materials

Printing materials should be stored indoors, in a dry area with adequate ventilation. The following table lists general requirements for storage, inventory control, and disposal.

Table 7 Requirements for hazardous materials

Topic	Requirement
Storage	15°C to 27°C (59°F to 81°F)
Inventory control method	First In First Out (FIFO)
Disposal	In compliance with local regulations

These specifications are applicable for most printing materials. Requirements for handling and storing specific materials appear in the Material Safety Datasheet (MSDS) included with each material.



**Note:**

- Non-compliance with these recommendations might result in reduced shelf life.
- Disposal of all liquid and solid waste, cleaning cloths, gloves, and empty material containers must be done in accordance with local laws and regulations.

## Cleaning Solvent

One liter of isopropanol (IPA) or ethanol (ethyl alcohol) should be available at all times for cleaning purposes.

The customer is responsible for ensuring that the material storage area complies with local regulations.

# Site Preparation Checklist

A checklist is provided by your Stratasys representative listing all of the tasks described in this document.

Fill in the information requested in the checklist, and submit it to your Stratasys representative. An installation date will be scheduled after the checklist has been approved by Stratasys.



[www.stratasys.com](http://www.stratasys.com)

—

**stratasys**<sup>®</sup>

THE 3D PRINTING SOLUTIONS COMPANY

ISO 9001:2008 Certified