



remove all transport fastening  
after machine is located  
before using the machine

**Transport without safety-hood !**