



**CAPSTONE TURBINE
CORPORATION**

CAPSTONE C1000 SERIES MICROTURBINE SYSTEMS TECHNICAL REFERENCE





CAPSTONE TURBINE CORPORATION
21211 NORDHOFF STREET
CHATSWORTH, CA 91311

Capstone Turbine Corporation

21211 Nordhoff Street • Chatsworth • CA • 91311 • USA

Telephone: (818) 734-5300

Facsimile: (818) 734-5320

Website: www.capstoneturbine.com

Capstone Technical Support

Toll Free Telephone: (866) 4-CAPSTONE or (866) 422-7786

Service Telephone: (818) 407-3600 • Fax: (818) 734-1080

E-mail: service@capstoneturbine.com



Table of Contents

<u>SUBJECT</u>	<u>PAGE</u>
CHAPTER 1: INTRODUCTION	1-1
DOCUMENT OVERVIEW	1-1
ARCHITECTS, ENGINEERS, AND OTHER EQUIPMENT SPECIFIERS	1-1
CAPSTONE TURBINE OWNERS AND OPERATORS	1-2
CAPSTONE INSTALLERS AND SERVICE PERSONNEL	1-2
CHAPTER 2: PRODUCT OVERVIEW	2-1
KEY COMPONENTS	2-1
MAIN FEATURES	2-3
AIR BEARINGS	2-4
EMISSIONS	2-4
ENCLOSURE	2-4
DUAL MODE OPTION	2-5
DISTRIBUTED GENERATION	2-5
HEAT RECOVERY MODULES	2-5
C1000 TURBINE APPLICATIONS	2-6
OUTPUT MEASUREMENTS	2-7
ISO Conditions	2-7
Pressure	2-7
Volume	2-7
Heating Values	2-7
TURBINE PERFORMANCE	2-7
GRID CONNECT OUTPUT	2-7
STAND ALONE OUTPUT	2-8
POWER QUALITY	2-8
HEAT OUTPUT	2-8
MAINTENANCE	2-8
CERTIFICATIONS, PERMITS, AND CODES	2-9
CHAPTER 3: SYSTEM DESCRIPTION	3-1
OVERVIEW	3-1
MAJOR C1000 FUNCTIONAL ELEMENTS	3-1
C1000 Container	3-3
Turbine Engine (or Turbogenerator)	3-3
Fuel System	3-3
Power Electronics	3-4
Electrical Output	3-4
C1000 Controller	3-4
Exhaust	3-5



CONTROL SYSTEM COMPONENTS	3-5
Load Controller	3-8
Generator Controller	3-8
Fuel Controller	3-8
Battery Controllers	3-8
System Controller	3-8
OPERATIONAL STATES	3-9
Power Up	3-9
Invalid	3-12
Stand By	3-12
Burn In	3-12
Idle Recharge	3-12
Cooldown	3-12
Wait for Permissive (LPG Systems Only)	3-12
Prepare to Start	3-12
Liftoff	3-12
Light	3-13
Acceleration	3-13
Run	3-13
Load	3-13
Recharge (Hot Standby)	3-13
Cooldown	3-13
Restart	3-13
Shutdown	3-14
Software Download	3-14
Protective Relay Test and Protective Relay Fault	3-14
Fault	3-14
Warmdown	3-14
Disable	3-14
POWER ELECTRONICS COMPONENTS	3-15
Generator Control Module	3-17
Load Control Module	3-17
Battery Control Modules	3-17
Battery Packs	3-17
Precharge Transformer	3-17
Main Output Contactor	3-17
Auxiliary Output Contactor – Dual Mode Only	3-17
Brake Resistors	3-17
CHAPTER 4: OPERATING MODES	4-1
GRID CONNECT	4-1
Introduction	4-1
Features	4-1
Power Specifications	4-1
Configuring Grid Connect Mode	4-2
Auto Restart	4-2
Grid Connect Operation	4-2



STAND ALONE	4-3
Introduction	4-3
Features	4-3
Power Specifications	4-3
Configuring Stand Alone Mode	4-4
Auto Load	4-4
Stand Alone Load Wait	4-4
Soft Start Functionality	4-4
Soft Start Voltage	4-5
Soft Start Frequency	4-5
Battery Overview	4-5
Main Battery Isolation Switch	4-5
UCB Battery	4-5
C1000 Controller Battery	4-6
System Sleep Mode	4-6
Stand Alone Operation	4-6
DUAL MODE	4-6
Configuring Dual Mode Operation	4-7
Fast Transfer	4-7
MULTIPAC	4-8
MultiPac Communications	4-9
Configuring MultiPac Operation	4-9
MultiPac Operation	4-9
Load Management Modes	4-10
Normal (Base Load)	4-10
Time of Use	4-11
Load Following	4-13
DISPATCH MODES	4-14
Load Balancing	4-15
Efficiency Optimization Modes and Spinning Reserve	4-15
Power Setpoint	4-16
Thermal Priority	4-16
Manual and Remote Operation	4-17
CHAPTER 5: BATTERY MANAGEMENT	5-1
BATTERY CHARGE MANAGEMENT	5-1
EQUALIZATION CHARGE	5-2
EQUALIZATION CHARGE AND CUSTOMER LOAD	5-2
C1000 CONTROLLER UPS BATTERY MANAGEMENT	5-3
CHAPTER 6: FUEL REQUIREMENTS	6-1



CHAPTER 7: PERFORMANCE	7-1
POWER OUTPUT	7-1
Efficiency and Fuel Heating Value	7-2
Fuel Parameters	7-3
Exhaust Characteristics	7-3
ISO Full Load Performance.....	7-3
How to Use This Section.....	7-4
Ambient Temperature Table.....	7-5
Elevation Derating.....	7-9
Inlet Pressure Loss Correction Factors	7-9
Back Pressure Correction Factors.....	7-11
Calculate Nominal Net Power and Fuel Input.....	7-12
Parasitic Loads	7-13
Estimate Exhaust Characteristics.....	7-13
Example Calculations	7-14
Consider Tolerances.....	7-15
Grid Connect Applications.....	7-15
Minimum Current Output	7-15
Stand Alone Applications	7-16
ISO Partial Load Performance	7-18
Example Calculations	7-25
CHAPTER 8: ELECTRICAL RATINGS	8-1
GRID CONNECT.....	8-1
STAND ALONE.....	8-5
AUXILIARY OUTPUT	8-9
Introduction	8-9
Capacity	8-9
Timing	8-9
MEASUREMENT ACCURACY.....	8-9
CHAPTER 9: PROTECTIVE RELAY FUNCTIONS	9-1
INTRODUCTION.....	9-1
PROTECTIVE FUNCTIONS	9-2
Under Voltage (Protective Function 27)	9-2
Primary Under Voltage Trip	9-2
Fast Under Voltage Trip	9-3
Over Voltage (Protective Function 59)	9-4
Primary Over Voltage Trip	9-4
Fast Over Voltage Trip	9-5
Over/Under Frequency (Protective Function 81 O/U).....	9-6
Rate of Change of Frequency (Anti-Islanding Protective Function)	9-6
Over Current and Fault Current.....	9-6
Reverse Power Flow (Protective Function 32)	9-7
Reverse Power Relay with Trip Signal.....	9-8
SHUTDOWN	9-9



CHAPTER 10: COMMUNICATIONS	10-1
INTRODUCTION.....	10-1
C1000 CONTROLLER CONNECTIONS	10-2
EXTERNAL CONTROLS	10-3
Start/Stop (Enable) Inputs.....	10-4
Local and Global Emergency Stop	10-4
Battery Wake-Up.....	10-5
Fault Input.....	10-5
Fault Output	10-5
External Gas Shutoff.....	10-6
Dual Mode System Controller Interface.....	10-6
Modbus Slave for Control System Integration	10-7
EXTERNAL POWER METER INPUTS	10-8
DC POWER OUTPUTS.....	10-9
MULTIPAC CONNECTIONS	10-10
Ethernet	10-11
MultiPac Cable.....	10-11
Signal Terminations	10-11
Cable Connection Details.....	10-11
CRMS-APS WITH ETHERNET	10-13
Overview.....	10-13
Connections to Third-Party Modems	10-13
Communications Cable	10-13
Modem and turbine Settings.....	10-13
Wireless Modems	10-13
Resources for Wireless Modems	10-13
User Password Levels	10-14
Customer and Ancillary Connection Wiring Summary	10-15
CHAPTER 11: MAINTENANCE	11-1
SCHEDULED MAINTENANCE	11-1
BATTERY LIFE	11-1
CHAPTER 12: INSTALLATION	12-1
INTRODUCTION.....	12-1
FUEL CONNECTION	12-2
POWER CONNECTION	12-2
Main Power Cables.....	12-2
Auxiliary Power Cables	12-2
Power Cable Access Locations.....	12-3
SHIPPING AND HANDLING.....	12-3
FOUNDATION	12-3
SERVICE CLEARANCES	12-3
EXAMPLE APPLICATIONS.....	12-5
Grid Connect Operation - Connection to a Utility System	12-5
Stand Alone (Remote) Operation – Turbine as Sole Power Source	12-7
Dual Mode – Turbine is Both Grid Connect and Standby	12-8



Reliability Operation, Isolated – Turbine as Grid or Prime Power Source	12-9
Single Phase Applications	12-11
120-240 Volt	12-11
120-208 Volt	12-13
Full Power	12-14
Special Applications	12-15
Motor Control with Soft Start	12-15
Grid Connect Power Factor Correction	12-15
Dual Mode Operation	12-15
Power Meter Application	12-16
Examples of Single Line Diagrams	12-18
UTILITY INTERCONNECTION	12-21
Overview	12-21
Interconnect Application Steps	12-21
Feasibility Study	12-21
Timeline	12-22
Configurations	12-22
Project Design	12-23
Interconnect Application	12-23
Protective Relay Functions	12-24
Application Review by the Utility Company	12-24
Interconnect Agreement	12-24
Start-Up and Tests	12-24
CHAPTER 13: REFERENCED DOCUMENTATION	13-1
APPENDIX A: C1000 MODBUS PARAMETER LIST	A-1
APPENDIX B: C1000 CONTROLLER SCHEMATIC	B-1

List of Figures

<u>FIGURE</u>	<u>PAGE</u>
Figure 2-1. C1000 Series Power Modules	2-2
Figure 2-2. Typical Capstone C200 Turbogenerator Construction	2-3
Figure 3-1. Major C1000 Functional Elements	3-2
Figure 3-2. Major Power Module Functional Elements	3-2
Figure 3-3. C1000 Control System Components	3-5
Figure 3-4. Major Turbine Power Module System Components	3-7
Figure 3-5. System Operational States – Grid Connect	3-10
Figure 3-6. System Operational States – Stand Alone	3-11
Figure 3-7. C1000 Electrical Architecture – Main AC	3-16
Figure 3-9. Power Module High Power Electronics Components	3-16
Figure 4-1. Typical MultiPac Interconnection with C1000 Packages	4-8
Figure 4-2. Grid Connect Operation in Normal (Base Load) Dispatch Mode	4-11
Figure 4-3. Grid Connect Operation in Time of Use Dispatch Mode	4-12



Figure 4-4. Grid Connect Operation in Load Following Dispatch Mode	4-13
Figure 4-5. C1000 Controller Touch Screen Display	4-17
Figure 7-1. Net Power vs Ambient Temperature	7-2
Figure 7-2. Elevation vs. Ambient Temperature Derating	7-9
Figure 7-3. Reactive Current Vs Real Current Output	7-16
Figure 7-4. ISO Partial Load Efficiency Vs Net Power (Nominal).....	7-24
Figure 7-5. ISO Partial Load Efficiency Vs Net Power (Maximum Efficiency)	7-25
Figure 8-1. Typical Total Harmonic Current.....	8-4
Figure 8-2. Typical Output Voltage Total Harmonic Distortion	8-8
Figure 9-1. Grid Connect System Configuration	9-1
Figure 9-2. Grid Fault Shutdown Trip Limits for Over/Under Voltage Events	9-4
Figure 10-1. Controller Location on the C1000 Series.....	10-2
Figure 10-2. Connection Locations within the C1000 Controller	10-3
Figure 10-3. Power Meter installation.....	10-8
Figure 10-4. MultiPac Signal Interconnections	10-10
Figure 11-1. Battery Temperature Increase due to Load Transients (per power module)	11-2
Figure 11-2. Temperature Derating for Battery Life	11-3
Figure 11-3. Derating for Number of Starts per Year.....	11-3
Figure 12-1. Fuel and Power Connections (Dual Mode Configuration Shown)	12-1
Figure 12-2. External Power Connection Access Locations	12-4
Figure 12-3. Grid Connect Operation	12-5
Figure 12-4. Grid Connect, Load-Following Operation Using a Power Meter	12-6
Figure 12-5. Stand Alone (Remote) Operation	12-7
Figure 12-6. Dual Mode Operation	12-8
Figure 12-7. Isolated Operation.....	12-9
Figure 12-8. Zig-Zag Connection	12-11
Figure 12-9. Zig-Zag Vector Diagram.....	12-12
Figure 12-10. 120/208 VAC Single-Phase Diagram	12-13
Figure 12-11. Full-Power Output via three (3) Isolated Single Phase Loads.....	12-14
Figure 12-12. Dual Mode System Controller Connection Diagram	12-16
Figure 12-13. Power Meter Connection Diagram	12-17
Figure 12-14. Single Line Diagram DMSC Example.....	12-18
Figure 12-15. Single Line Diagram Grid Connect Example	12-19
Figure 12-16. Single Line Diagram MultiPac Example.....	12-20
Figure B-1. C1000 Controller Schematic.....	B-3



List of Tables

<u>TABLE</u>	<u>PAGE</u>
Table 2-1. C1000 Series Enclosure Specifications	2-5
Table 2-2. Exhaust Output Ratings	2-8
Table 3-1. Electrical Output Ratings.....	3-4
Table 4-1. C1000 Controller Operating Features vs. Operational Modes	4-16
Table 6-1. Fuel Input Requirements	6-1
Table 6-2. Maximum Sulfur Content.....	6-2
Table 6-3. General Fuel Requirements for All Fuel Types	6-2
Table 7-1. Capstone C1000 Series Turbine Performance Summary	7-4
Table 7-2. Nominal Net Power Output and Efficiency versus Ambient Temperature	7-6
Table 7-2. Nominal Net Power Output and Efficiency versus Ambient Temperature (Cont) ...	7-7
Table 7-3. Nominal Fraction of ISO Zero Inlet Pressure Loss Power and Efficiency.....	7-10
Table 7-4. Nominal Fraction of ISO Net Power Output and Efficiency Vs Exhaust Back Pressure at ISO Ambient Conditions	7-11
Table 7-5. Example Calculation for Nominal Power, Efficiency, and Exhaust Characteristics	7-14
Table 7-6. Maximum kVA and Current vs Voltage at ISO Conditions	7-17
Table 7-7. Partial Load Performance at ISO Ambient Conditions	7-19
Table 8-1. Electrical Ratings: Grid Connect.....	8-1
Table 8-2. Electrical Ratings: Stand Alone	8-5
Table 8-3. Typical/Maximum Instrumentation Accuracy and Coefficients	8-10
Table 9-1. Under Voltage Protective Function Parameters.....	9-3
Table 9-2. Over Voltage Protective Function Parameters.....	9-5
Table 10-1. Start/Stop Input Connection Details.....	10-4
Table 10-2. E-Stop Connection Details	10-5
Table 10-3. Operating Mode Connection Details.....	10-6
Table 10-4. C1000 Controller and DMSC Terminal Block Connections	10-6
Table 10-5. Modbus Power Meter Wiring Pins to C1000 Controller PLC	10-8
Table 10-6. 24 Volt DC Power Source (10 Watt Max)	10-9
Table 10-7. C600, C800 and C1000 Connectors.....	10-12
Table 10-8. Twisted Wire Pair Limits.....	10-12
Table 10-9. Customer and Ancillary I/O Connections	10-15
Table 12-1. Main Power Cable Sets.....	12-2
Table 12-2. Auxiliary Power Cable Sets	12-2
Table 12-3. Mode/Configuration Performance Comparison.....	12-10
Table A-1. Modbus Pre-Defined Registers	A-2
Table A-2. Turbine Commands	A-6
Table A-3. Turbine Operating Parameters Status.....	A-7
Table A-4. Turbine Data.....	A-9
Table A-5. PLC I/O Parameters	A-10
Table A-6. Slave Modbus Write Parameters	A-13
Table A-7. Group Commands	A-14
Table A-8. Group Operating Parameters Status.....	A-15
Table A-9. Turbine Settings.....	A-16
Table A-10. APS Settings	A-22