


ACTIVATION UV LAMP

In the new release there is the option to change the activation of UV lamp.

The activation can works in two way:


1. Object “Enable UV ON Delay” OFF (default)

- a. Enable: the lamp switches ON when the robot put the first bar inside the chain
- b. Disable: the lamp switches OFF when the machine will be empty

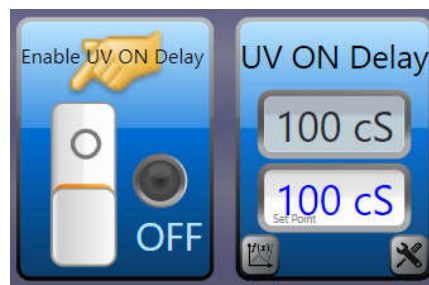

2. Object “Enable UV ON Delay” ON

- a. Enable: the lamp switches ON after the chain starts with a settable delay
The delay's value have to be write in the setpoint space of the object “UV ON Delay” the unit of measure is in cS
- b. Disable: the lamp switches OFF when the chain stops at the end of its cycle

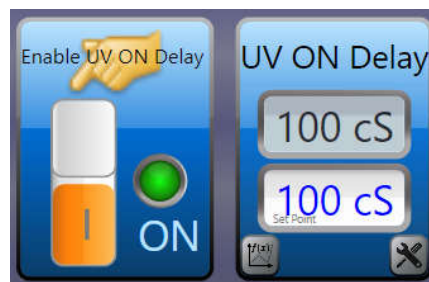

NOTE: the function has effect on all processes and it is manually, then pay attention how to set it