
Wobarg Maskinkonstruktion ApS
Fuglsbjergvej 11, DK-8700 Horsens
TLF: +45 20 96 63 55

Installation manual

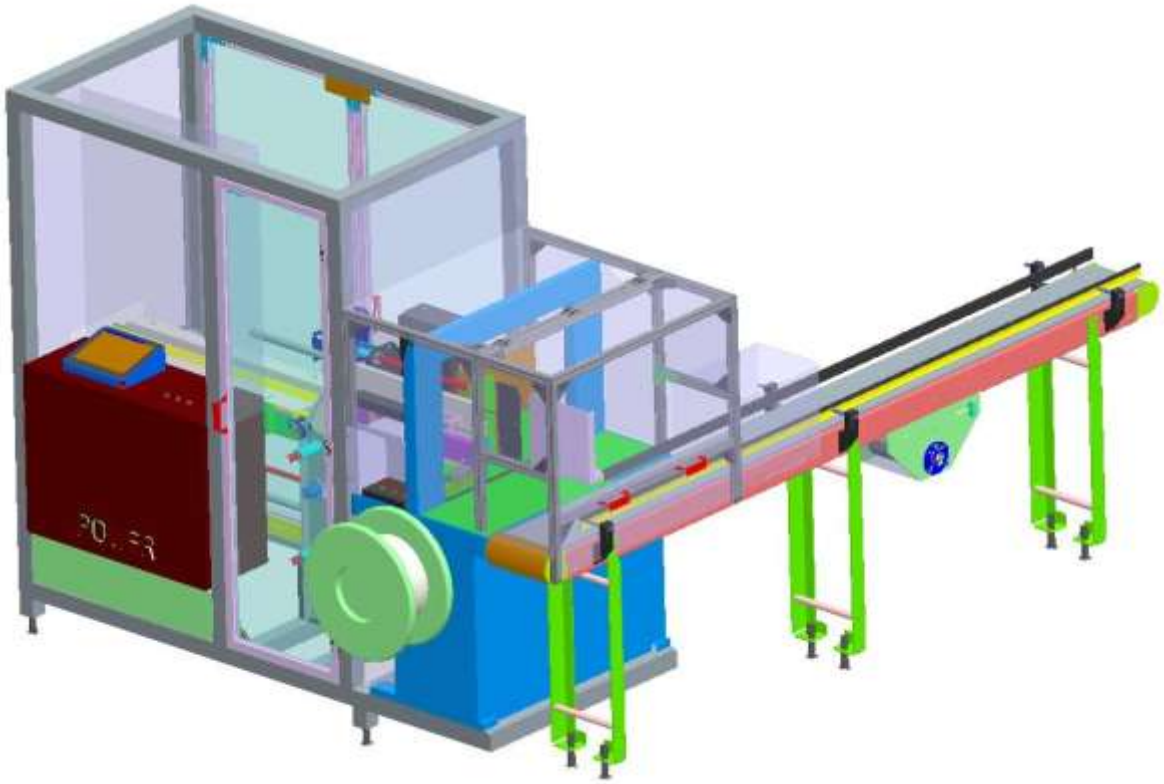


It is very important that the machine is installed on an even concrete floor, to make it possible to align the machine in horizontal position. Use a spirit level.

N.B. It is of most importance that the machine units are in line. This will ensure that the products can run smoothly from one unit to the other without errors occurring.

Make sure to secure the machine properly fastend to the floor afterwards, using concrete anchors.
Electrical power should be installed as shown in the electrical diagram.

Wobarg Maskinkonstruktion ApS
Fuglsbjergvej 11, DK-8700 Horsens
TLF: +45 20 96 63 55

Transportation manual

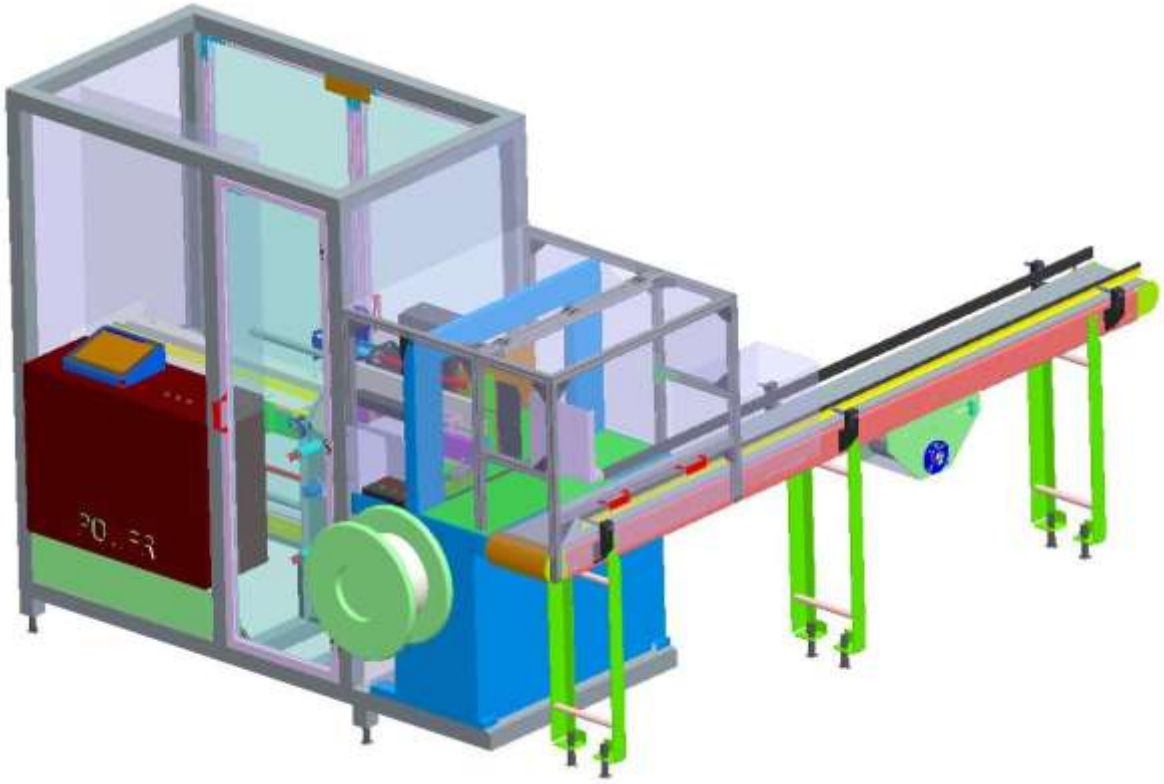

The machine can be lifted from underneath the welded frame. A forklift can be used.

Before moving the machine, the following must be done:

- Make sure all electrical cables have been disconnected
- Make sure that air supply for the pneumatic system has been disconnected
- All moveable parts within the machine system must be properly secured to avoid damage
- The electrical cabinets must be secured so they are not exposed to vibrations during the transport

N.B. None of the units must under any circumstances tip over during transportation, since this may cause severe damage to the components.