



OPERATING INSTRUCTIONS

Expandable roller conveyor FRB-P5, FRB-S5, FRB-PK7, FRB-SK7

CONTENT

GENERAL	Foreword	11
	Safety instructions	11
	Parts list	12
	Operating instructions	15
	Service & Contact	15
	EU Declaration of Conformity	16

FOREWORD

Congratulations on the purchase of your new expandable roller conveyor. The easy-to-use roller conveyor has been manufactured from high-quality materials, especially for durable and reliable use. For your own safety and correct operation, be sure to read and follow these operating instructions before commissioning.


Keep these operating instructions. Check the roller conveyor for transport damage. Damaged expandable roller conveyors must not be put into use. Improper handling may result in injury or damage to the roller conveyor.

The manufacturer is not liable for damage resulting from improper use of the roller conveyor or disregard of the specifications and rules of conduct in this operating manual. The operator / user must ensure correct use by trained and authorised personnel.


SAFETY INSTRUCTIONS

- Please read this manual carefully before use.
- Before use, make sure that all brakes, handles and knobs are properly fastened and tightened.
- Please clean the roller conveyor regularly to prolong its service life.
- Take care of your fingers during use. There is a risk of crushing.
- Please do not place any goods on the roller conveyor that exceed the maximum load.
- · Always wear gloves.
- The material to be conveyed should always rest on at least 3 rollers. If it is too narrow, proper conveying cannot be guaranteed and the material can get caught / jammed.


PARTS LIST

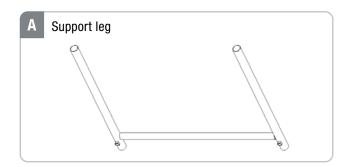

Туре	Quantity
FRB-P5	5
FRB-S5	5
FRB-PK7	7
FRB-SK7	7

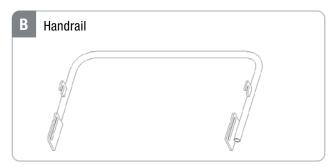


Туре	Quantity
FRB-P5	1
FRB-S5	1
FRB-PK7	1
FRB-SK7	1

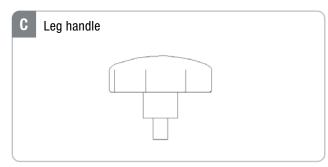

Туре	Quantity
FRB-P5	10
FRB-S5	10
FRB-PK7	14
FRB-SK7	14




Туре	Quantity
FRB-P5	10
FRB-S5	10
FRB-PK7	14
FRB-SK7	14

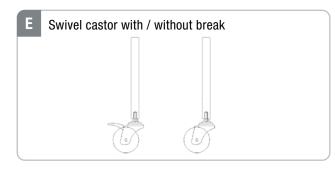

Тур	Menge
FRB-P5	10
FRB-S5	10
FRB-PK7	14
FRB-SK7	14


- 1. Unpack the two boxes and check the parts for completeness.
- 2. First assemble the legs of the roller conveyor.

For this you need a support leg, a pair of castors (with or without brake) and two leg handles.

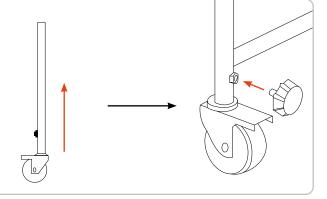




Attention: Each support leg should have two swivel castors of the same type (with or without brake).

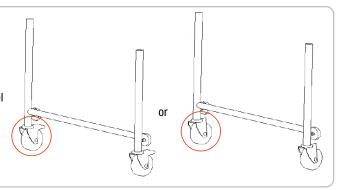



3. Take the roller track out of the box and attach the feet.

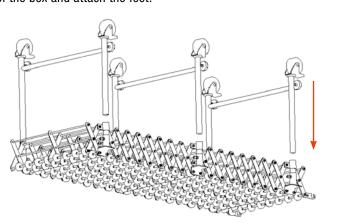





Leg sets with brakes must be mounted on every second leg. Make sure that the feet at the end of the roller track are equipped with brakes.

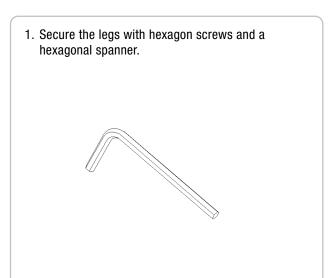

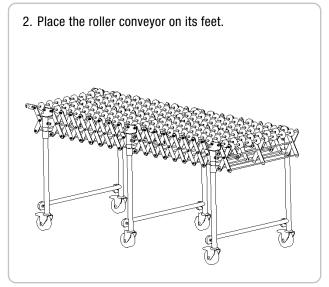


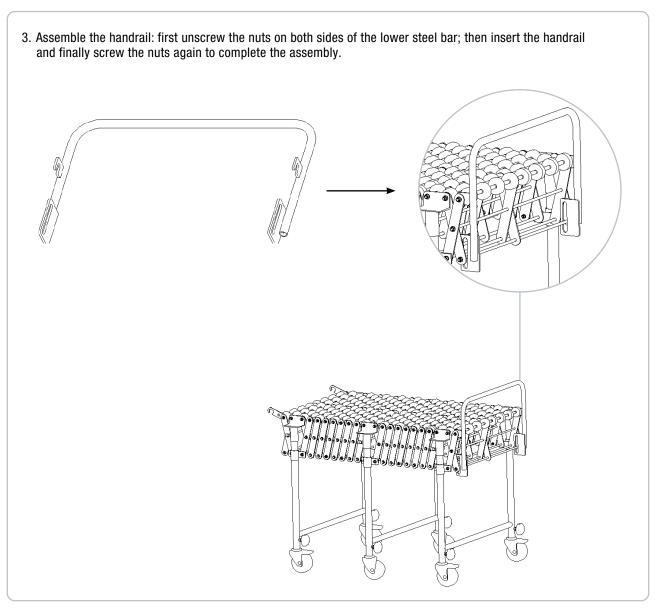

OPERATING INSTRUCTIONS

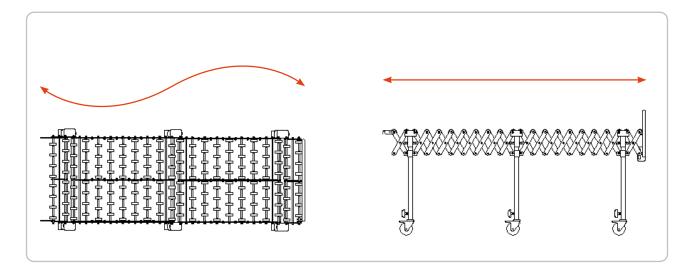

1. The height of the roller conveyor can be adjusted, and when transporting goods, it is possible to have an inclined position. You can adjust the height of the feet individually by adjusting the leg handle.

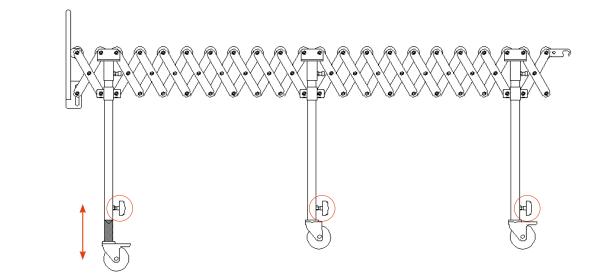



Attention: Before use, make sure that the handles are well secured.

SERVICE & CONTACT

Contact our product experts and find help and solutions for your product. Here you will find all contact information listed by country and language: www.topregal.co.uk/en/service

Responsible for the content: TOPREGAL GmbH Industriestrasse 3 70794 Filderstadt GERMANY www.topregal.com

UKCA Declaration of Conformity

The manufacturer

TOPREGAL UK Ltd. Carlton Drive Crumlin Gwent NP11 4EA

hereby declares that the following product

Product name: Type:

Tecmaschin FRB-P5, FRB-S5, FRB-PK7, FRB-SK7

Expandable roller conveyor

Serial number:

that the equipment is in conformity with the following relevant UK legislations and applied standards:

2006/42/EC Machinery Directive 2014/30/EU Electromagnetic compatibility (EMC)

EN ISO 12100, EN 60204-1, EN 61000-6-2+AC, EN 61000-6-4+A1, EN 61000-3-2, EN 61000-3-3

Name and adress of the person who is authorized, compile the technical documentation:

TOPREGAL UK Ltd. Carlton Drive Crumlin Gwent NP11 4EA

Place: Crumlin UK Date: 29.08.2022 Juergen Effner Chief Executive Officer

Min WH



TOPREGAL

